




Operating Instructions (EN)


MODELS:

17" Disk Traction 20" Disk Traction

17" Disk Pad Assist 20" Disk Pad Assist

20" Orbital Traction 24" Orbital Traction

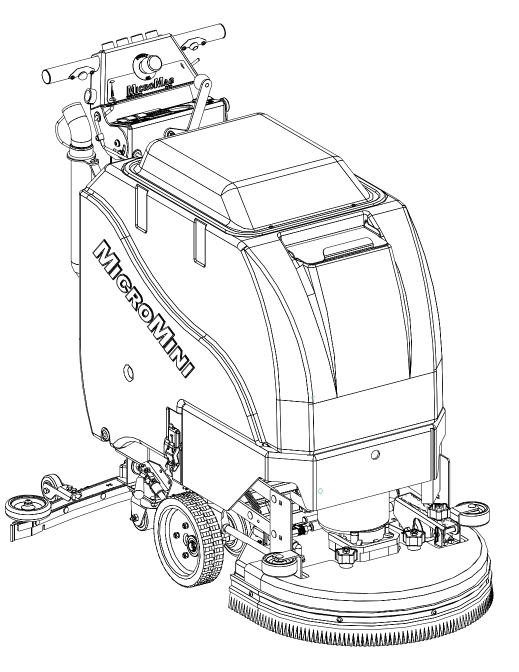

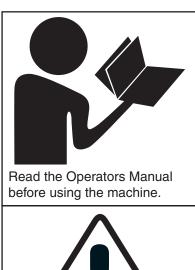

Read the Safety Messages before servicing machine.

INTRODUCTION

This manual is furnished with each new machine. This manual will allow the Operator to get the best performance out of your RPS manufactured Scrubber-Drier, Sweeper, Burnisher, or Orbital Scrubber. Read this manual thoroughly before operating or servicing the machine.

This machine will provide excellent performance, but the best results will be obtained at the most minimum costs if:

- The machine is regularly maintained per the machine Preventative Maintenance instructions provided.
- The machine is operated with reasonable care and caution.
- The machine is maintained with manufacturer supplied parts.

ABOUT THIS MANUAL

Table of Contents: Tells you where to look in the manual.

Safety: Section contains important information regarding hazard or unsafe practices of the machine. Levels of hazards are identified that could result in product or personal injury, or severe injury resulting in death.

Machine Controls: Shows you the different machine controls and features.

Machine Setup: Tells you how to setup machine from un-crating to installing Squeegee and Brushes.

Operations: Section is to familiarize the operator with the operation and function of the machine.

Battery Charging: Shows you how to charge the Batteries (on-board and off board charging).

Maintenance: This section contains preventative maintenance to keep the machine and it's components in good working condition. They are listed in this general order:


- Batteries
- Scrub Brushes
- Adjusting Squeegee
- Service Schedule
- Machine Trouble Shooting

Trouble Shooting: A list of common problems that may occur.

Machine Install Form: Should be filled out upon machine installation and faxed to 1-866-632-6961 or online at www.rpscorporation.com.

Warranty Policy: Tells you coverage, exclusions and limitations to warranty.

NOTE: The Serial Number of your machine is located on the lower half of the control panel of the machine.

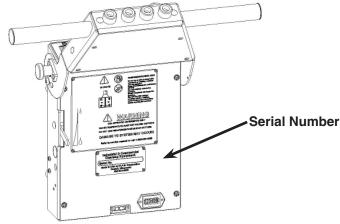

AS OUR POLICY IS ONE OF CONSTANT IMPROVEMENT - ALL INFORMATION AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

- 2 -

TABLE OF CONTENTS

Battery Charging	19
External Battery Charging:	19
On-Board Charger	20
On-Board Battery Charging (Optional):	20
Battery Maintenance Guide	21
Safety:	21
Inspection and Cleaning:	21
Storage:	
Watering:	21
Maintenance	22
Daily Maintenance:	22
Weekly Maintenance:	
Monthly maintenance:	
Yearly Maintenance:	
Storing Machine:	
Checking Battery Specific Gravity:	22
MicroMini PM Records	23
Trouble-shooting	25
Machine Specs	27
Common Wear Parts	28
EDGE/ORBITZ Pads and Screens:	28
Squeegee Blade Kits & Complete Squeegee Assemblies:	
Soap Choices	
Standard Warranty Policy	32
Machine Install / Warranty Registration	33

MICROMINI-OP-EN - 3 -

SAFETY MESSAGES

You will see four kinds of safety reminders in this manual:

ADANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

AWARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury or damage to this machine or nearby objects. CAUTION also can be used to alert against unsafe practices.

NOTICE

NOTICE indicates information considered important, but not hazard-related. This safety message may be related to property damage or warranty warnings.

Your safety, and that of others, is very important. Operating this machine safely is an important responsibility.

DO NOT OPERATE THIS MACHINE UNLESS:

- You are trained and authorized to do so
- You have read and understood this Operator's Manual
- On surfaces with greater than a 2% grade unless this machine is equipped with a functional parking brake.

WHEN OPERATING THIS MACHINE:

- Remove loose objects from the floor that could be projected from the rotating Brushes
- Keep your hands and feet away from the rotating Brushes
- Do not operate this machine where flammable liquids are present
- Use caution when maneuvering

BEFORE LEAVING THE MACHINE:

- Park the machine on a level surface
- Turn the machine OFF

BEFORE SERVICING THE MACHINE:

Disconnect the Batteries

ADANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

ADANGER

Flammable materials can cause an explosion or fire. Do not use flammable materials in tank or pick up.

- 4 - MicroMini-OP-EN

A WARNING

The Batteries in this machine produce hazardous voltage which can cause electrical shock, burns and/ or electrocution. Always disconnect Batteries before servicing this machine.

A WARNING

When climbing or descending ramps, always drive machine forward. To avoid overturning the machine, Do not back down ramps. Do not drive across inclines. Do not turn while ascending or descending ramps. Overturning the machine can cause serious injury or death.

A WARNING

Do not use water that exceeds $135^{\circ}F/57^{\circ}C$. If water is above said temperature, this will void the Tank Warranty.

A WARNING

Do not park this machine on ramps or slopes. Always park this machine on a level, hard surface. Do not operate this machine outdoors or on uneven surfaces.

AWARNING

The batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

A WARNING

To avoid electrical shock, do not operate this machine over electrical floor outlets.

ACAUTION

To avoid damage to this machine, use only cleaning solutions and replacement parts recommended by the manufacturer.

ACAUTION

Do not operate this machine if any parts have been damaged or removed.

A WARNING

Dress safely. Do not wear rings or metal wrist watches when servicing this machine, as they can cause an electrical short circuit which can cause serious burns.

A WARNING

Do not remove, paint over or destroy warning decals. If warning decals become damaged, call 1-262-681-3583 for free replacements.

A WARNING

Dress safely. Do not wear a neck tie, scarf, or any loose or dangling clothing while operating this machine. Loose or dangling clothing or neck-wear can tangle in rotating parts, causing serious injury or death.

A WARNING

Always turn off this machine before leaving it unattended. Do not allow untrained persons to operate this machine.

A WARNING

NO RIDERS. Do not carry passengers on this machine. Do not use this machine as a stepladder or work platform.

AWARNING

Understand the dynamic braking system before you operate the machine on ramps. Machine may coast.

AWARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

ACAUTION

Always use the automatic battery charger provided by the manufacturer of this machine to charge the batteries of this machine. It is designed to charge the batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.

ACAUTION


To avoid damage to the electronic control components of this machine, Do not store this machine outdoors. Do not pressure wash this machine.

MicroMini-OP-EN - 5 -

SAFETY LABEL LOCATIONS


Read and obey all Safety Labels on your MICROMINI Floor Scrubber. If you have questions about these labels, ask your supervisor.

These images indicate where on the MicroMini Safety Labels are located. If ever the labels become illegible, worn off, or torn, promptly report it to your supervisor and replace it.

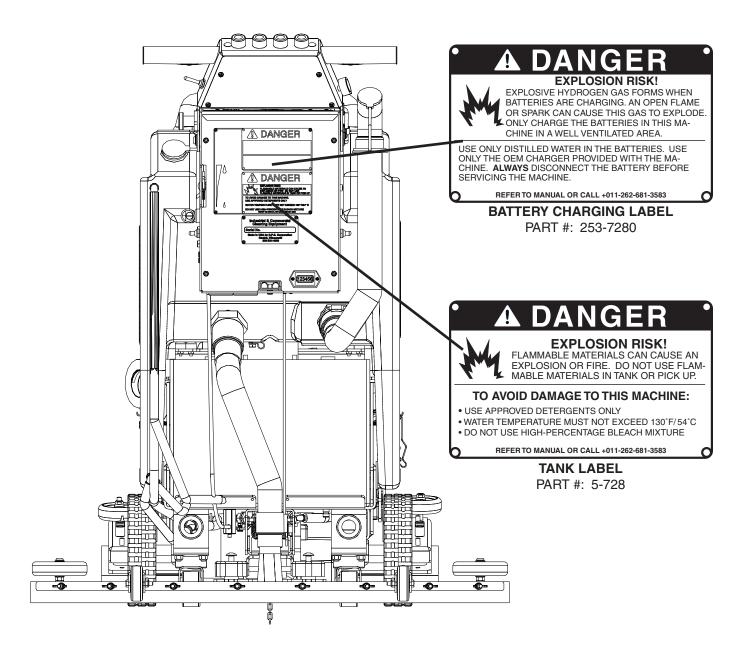

- 6 - MicroMini-OP-EN


OPERATION CONTROLS

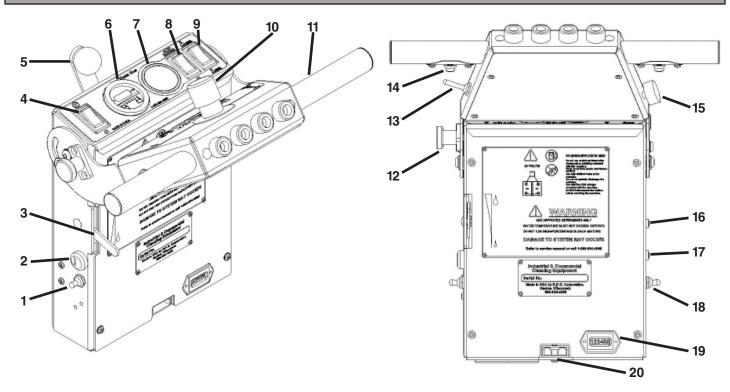


- 1. MAIN POWER SWITCH (OPTIONAL): Turns the machine ON and OFF
- 2. POWER SWITCH: Turns power on to the machine
- 3. **SOLUTION CONTROL LEVEL:** Controls solution flow (*Up = MORE, Down = LESS*)
- 4. VACUUM SWITCH: Turns the Squeegee Vacuum Motor ON and OFF
- 5. SQUEEGEE LIFT LEVER: Raises and lowers the Squeegee
- BATTERY GAUGE / HOUR METER: Indicates the amount of Battery charge remaining
- 7. SCRUBDECK DOWN PRESSURE GAUGE (OPTIONAL): Shows the amount of down pressure applied to Scrubdeck
- 8. SCRUBDECK SWITCH: Turns the Scrubdeck ON or OFF & UP or DOWN
- 9. SOLUTION FLOW SWITCH: Turns solution flow ON or OFF
- EMERGENCY SHUT OFF SWITCH (OPTIONAL): Shuts OFF the machine in case of emergency
- 11. HANDLE BAR: Adjustable Handlebar
- **12. ADJUSTABLE HANDLE BAR LOCK:** Pull out to adjust Handlebar and release to lock the Handlebar in place
- 13. REVERSE SWITCH: Pull back for reverse
- 14. DRIVE BUTTON: Press to drive forward, release to stop
- **15. SPEED CONTROL KNOB:** Controls the speed of the Traction Drive Turn counter-clockwise to reduce speed
- 16. CIRCUIT BREAKER: 25 AMP resettable circuit breaker for Vacuum Motor
- 17. CIRCUIT BREAKER: 40 AMP resettable circuit breaker for Scrub Motor
- 18. SPRAY JET [BLUE BOOT] (OPTIONAL): Activates Spray Pump for remote Spray Wand
- 19. RECHARGE CYCLE METER: Shows the amount of charges on a machine
- 20. CHARGER PORT: Red 50 used to receive charger input for optional external charger 24V ONLY!


MicroMini-OP-EN - 7 -


MACHINE COMPONENTS

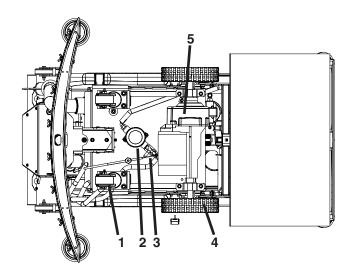

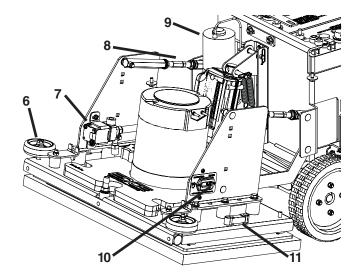


- 1. CASTER: Twin casters for stability
- 2. SOLUTION FILTER: Filters water solution prior to scrubbing
- SOLUTION FLOW SHUT OFF VALVE: Meters solution rate (GPM)
- 4. MAINTIRES: Drive Tires
- 5. TRACTION DRIVE: Propels machine forward/reverse
- **6. WALL ROLLERS:** Helps protect machine when scrubbing near walls
- **7. SOLUTION FLOW VALVE:** Turns solution ON / OFF (*Turns off when motor stops*)
- 8. DECK ADJUSTMENT ARMS: Determines the pitch / level of the machine deck
- **9. SPRAY JET MOTOR (OPTIONAL):** Motor for the Spray Jet Spray Nozzle
- **10. ISOLATOR HOUR METER:** Hour meter specifically for how long the Motor has run to determine replacement of Isolators Change Isolators < 250 Hours
- 11. DECK LEVEL: Displays the Level of the Deck while machine is scrubbing For best performance, use machine only with working, level deck
- 12. VACUUM MOTOR: Creates vacuum for Tank / Squeegee
- **13.** "DRAIN SAVER" STRAINER: Helps prevent clogging of drain ports
- 14. VAC SCREEN: Protects Vacuum Motor from debris
- 15. RECOVERY LID: Used for flushing out Recovery Tank area with fresh water

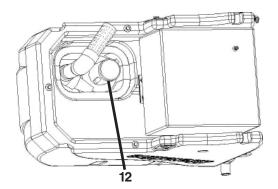

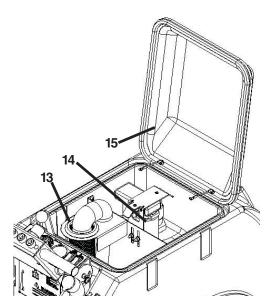

- 8 - MicroMini-OP-EN

MACHINE COMPONENTS

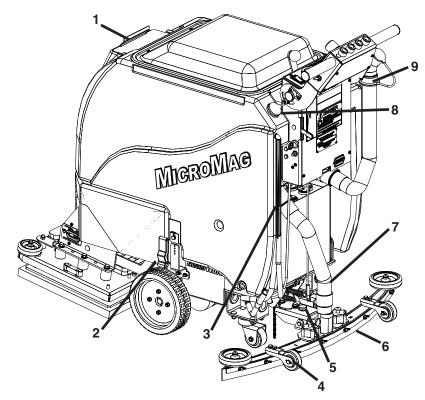

- 1. FRONT SOLUTION FILL POINT/LID: Front fill port for filling Solution Tank
- 2. TANK LATCH: Secures Tank to frame
- **3. SOLUTION SIGHT TUBE AND DRAIN HOSE:** Displays how much clean water is in the Tank and drains clean water
- **4. ADJUSTABLE SQUEEGEE HEIGHT WHEELS:** Height of wheels adjust to height of Squeegee
- **5. SQUEEGEE PITCH ADJUSTMENT:** Adjusts pitch of Squeegee Deflection should be even across entire Blade
- 6. SQUEEGEE BLADE: Recovers dirty water from floor to be recovered by Vacuum Hose
- 7. VACUUM HOSE: Creates vacuum for Squeegee (NOTE: Keep free and clear of blockage)
- 8. REAR SOLUTION FILL POINT: Rear fill port for filling Solution Tank
- **9. RECOVERY DRAIN HOSE:** Allows for controlled draining of Recovery Tank


MicroMini-OP-EN - 9 -

MACHINE SETUP

UN-CRATING MACHINE:

Carefully check the crate for any signs of damage and that the Batteries are in the unit.

To un-crate the machine, remove banding strips from around the crate. Take off the top and sides and dispose properly. Remove brackets (A) from machine frame. Remove bolts from pallet, then remove board. Carefully roll the machine off of the base. Notify the carrier immediately if concealed damage is discovered.

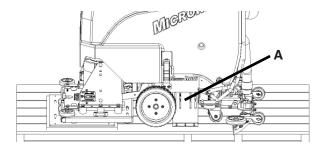

CONNECTING BATTERIES:

Your machine is equipped with (2 \times) 12-Volt/ 130 AH, or (2 \times) 12-Volt/ 150 AH Wet Lead Acid, AGM, or Deep Cycle Batteries which form a 24 Volt system.

(SEE PICTURE BELOW FOR CORRECT CABLE CONNECTIONS)


- 1. Turn all switches to the *OFF* position and remove Key (if machine is equipped with optional key switch).
- 2. Attach Battery Cables as shown below.
- Turn ON main power switch and check the battery condition meter to ensure correct installation. Charge Batteries if needed (SEE BATTERY CHARGING).

NOTICE

Batteries are a possible environmental hazard. Consult your Battery supplier for safe disposal methods.

NOTICE


Orientation of Batteries is critical for cables to reach.

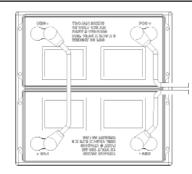


24 VOLTS

ATTACHING SQUEEGEE:


 Lower the Squeegee Mounting Plate by rotating the Squeegee Lift Lever (A) in a clockwise motion (SEE BELOW).

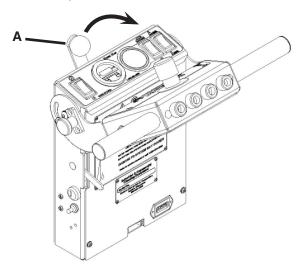

 Loosen the two knobs (B) on the squeegee and slide them into the slots in the Squeegee Mounting Plate (SEE BELOW).

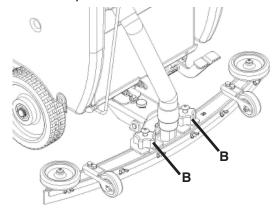

Tighten the two knobs and connect the Vacuum Hose (C) from the machine to the Squeegee (SEE BELOW).

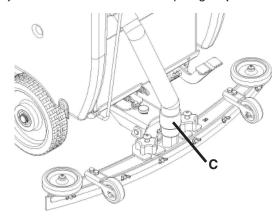


4. You may have to adjust the Squeegee Pitch (SEE AD-JUSTING SQUEEGEE ON THE NEXT PAGE)

- 10 - MICROMINI-OP-EN


ADJUSTING SQUEEGEE:

 Turning adjustment knob (A) clockwise (tightening) will lower tips and raise the center of the Squeegee (SEE BELOW).

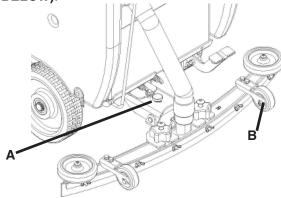


- Adjustable Wheel (B) (SEE ABOVE) has 3 holes. The closer to the machine the wheel is, the further from the ground the wheel becomes. The farther from the machine the wheel is, the closer to the ground the wheel becomes.
- 3. This Squeegee is adjusted too far back and will not pick up on the corners (SEE BELOW).


 NOTE: Tips off of the floor.

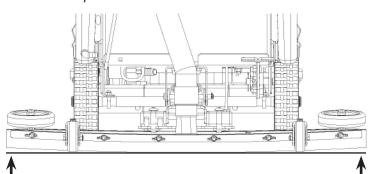

 This Squeegee is adjusted too far forward and will not pick up in the center (SEE BELOW).

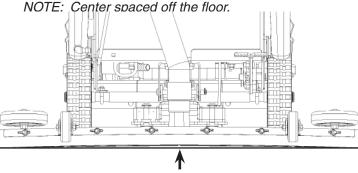


This squeegee is adjusted just right with good deflection across the entire rear blade (SEE BELOW).

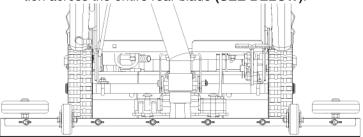

REMOVING SQUEEGEE:

- 1. With the Squeegee in the up position, turn machine power off.
- 2. Disconnect Vacuum Hose (A) from Squeegee and loosen both knobs (B) (SEE BELOW).
- Pull Squeegee assembly backward from the lifting carrier.
- 4. Inspect or repair as needed and reinstall.

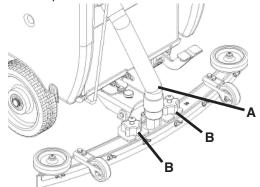

REPLACING OR ROTATING SQUEEGEE BLADES:


FOR SAFETY: Before leaving or servicing the machine, stop on a level surface, turn off machine and remove Key.

- 1. Remove the Squeegee assembly from the machine. Remove Blade retainer strap and remove Squeegee Blade.
- 2. Rotate the Squeegee to new edge position or replace as required.
- Install Blade on the locating pins of Squeegee assembly.
- Install squeegee retainer strap.
- 5. Fasten and lock knobs, starting in the center and moving outwards.


MicroMini-OP-EN - 11 -

INSTALLING EDGE/ORBITZ PADS:

- 1. Turn on machine power.
- Raise the Scrubdeck by depressing the Brush switch to the UP and OFF position and turn machine power back OFF.
- Select the correct Pads that best meet your cleaning application. Consult your local dealer for assistance.
- Remove any Pad previously attached to the EDGE/ ORBITZ Grip Face by pulling down from the corners (SEE BELOW).

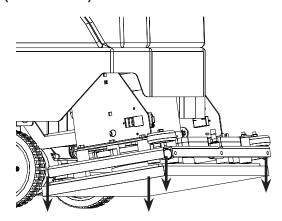

- 5. Once Grip Face is clear of any Pads, place pad wanted for application centered on the Grip Face (*This will leave a ½" overhang on all sides*).
- Press upwards on the Pad to secure it in place (SEE BELOW).

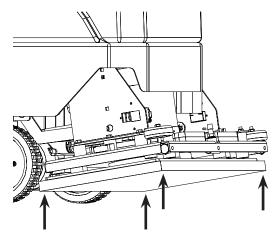

With Pad attached securely to Grip Face of EDGE/ ORBITZ Deck, the machine is ready to use.

LEVELING EDGE/ORBITZ DECKS:


NOTICE

All Scrubdeck's should be level at time of machine delivery. If machine Scrubdeck is not level - Contact your Servicing Dealer.

- Drive machine to a flat level surface and raise the Machine Deck by depressing on the Scrubdeck Switch on the control panel.
- 2. Turn Machine OFF.

NOTE: Deck should be equipped with a Red Buff Pad or a Blue Cleaner Pad if not already.

- 3. With the correct Pad attached to the machine, press the Scrubdeck Switch and lower the machine deck just until it touches the floor, then turn off the machine.
- 4. Using Deck Levels (A) located on the sides of the Deck, make sure that the Deck is level. If not, loosen the Adjustable Arms attached to the EDGE/ORBITZ deck by loosen the locking Nuts (B) and turning the hexagonal arm (C) on each side of the Scrubdeck to level it (SEE BELOW).

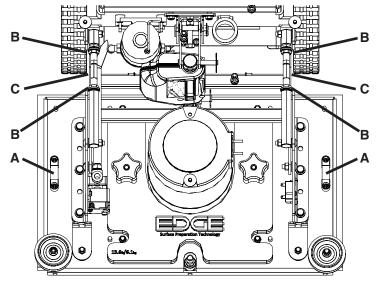

- 5. Extending the adjustable arms raise the front and lower the rear of the Scrubdeck.
- Once Scrubdeck is level retighten and raise Scrubdeck.

NOTICE

NEVER place aggressive Pads (Maroon Prep, Dominator HD Strip, etc.) directly onto the Grip Face. Always use Red or Blue Spacer pad to prevent Grip Face damage.

- 12 - MicroMini-OP-EN

MACHINE OPERATION


PRE-CLEANING CHECKLIST:

Read and understand the Safety Messages section on Pages 6 and 7 before operating the machine.

- Check Battery Condition Gauge on the Control Panel. Make sure Batteries are fully charged before using.
- Check the condition of the Pads.
- Check the condition of the Squeegee Blades.
- Raise the Scrubdeck and Squeegee before transporting then transport the machine to the filling station.
- Turn the machine OFF.
- Fill the tank with up to 10 gallons of clean water either at the front fill port (A) or rear fill port (B) (SEE BE-LOW).
- Add APPROVED cleaning chemical to the tank. Use the proper dilution ratio indicated on the bottle. Contact us at 1(800)-634-4060 or +011-262-681-3583 if unsure.

NOTICE

The clear tube (Solution Sight Tube) (C) at the rear of the machine indicates the amount of water in the tank (SEE BELOW).

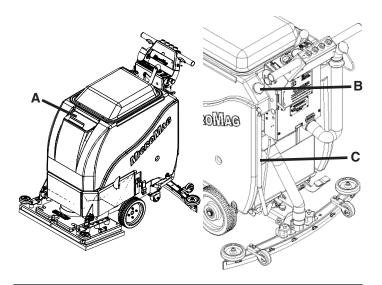

A DANGER

EXPLOSION RISK! Flammable materials can cause an explosion or fire. Do NOT use flammable materials in Tank or pick up.

ACAUTION

TO AVOID DAMAGE TO THIS MACHINE:

- Use approved Detergents only
- Water temperaturemust not exceed 130°F/54°C
- Do NOT use high-percentage Bleach mixture

OPERATING HINTS:

- Observe the amount of solution the machine is dispensing on the floor and adjust to the desired flow. To increase the solution flow rate, pull the Solution Control Lever up. To shut the solution *OFF* completely, just release the Drive button, or use dash mounted switch.
- Keep an eye on the clear Vacuum cover to make sure that there is not any foamy buildup in the Recovery Tank. If excess foam begins to develop, pour a recommended foam control solution into the Recovery Tank. Foam is usually an indication of excessive soap.
- Always operate at lower speeds when scrubbing around walls and objects. You should reduce the speed to maintain control when turning.
- If Squeegee starts to streak, raise and wipe the blades with a clean cloth. if the problem continues, check the Squeegee Blades for wear or damage and rotate if needed. You may need to pre-sweep before scrubbing. (Only Use OEM Parts)
- 5. Change or turn over Pads when dirty.
- Stay clear of objects protruding from the floor such as sockets, grates, etc, for they will damage the Pads and Squeegee Blades.
- Always keep an eye on your gauges. They let you know the status of a particular system at a glance. If your battery gauge is reading low you much stop immediately and recharge. Running the Batteries dead will result in damage to the Batteries.
- 8. When you run out of solution, raise the Scrubdeck and continue to Vacuum the remaining water until it is all consumed. The Solution Sight Tube is used to indicate the level of detergent remaining in the Tank.
- 9. When you are ready to stop, raise the Scrubdeck, turn OFF the solution switch, raise the Squeegee and drive the machine back to the charging area. Be sure to drain both Tanks before storing the machine.

MicroMini-OP-EN - 13 -

ONE PASS SCRUBBING:


- 1. Turn on machine Power Switch (A), make sure the Speed Control Knob (B) is at a lower setting.
- Lower the Squeegee by rotating the Squeegee Lift Lever (C) all the way to the right. Turn on Vacuum Motor with Vacuum Switch on Control Panel (D).
- Lower Scrubdeck head to the floor by pressing the Scrubdeck Switch on the Control Panel (E).
- Move the Solution Flow Lever (F) to regulate the amount of solution flow.
- 5. Begin scrubbing by pressing one of the green Drive Buttons *(G)* on the Handlebars. Adjust the Speed Control Knob *(B)* to the desired setting.
- To operate the machine in reverse, simply pull the Reverse switch (H) back towards the Handlebar. The reverse speed is set to approximately 50% of the forward speed.
- 7. To stop the machine, let go of the Drive Buttons (G).

SCRUB ONLY:

- 1. Turn on machine Power Switch (A) while making sure the Speed Control Knob (B) is at a lower setting.
- 2. Lower Scrubdeck head to the floor by pressing the Scrubdeck Switch on the Control Panel (E).
- 3. Move the Solution Control Lever *(F)* to regulate the amount of solution flow.
- Begin scrubbing by pressing one of the green Drive Buttons (G) on the Handlebars. Adjust the Speed Control Knob (B) to the desired setting.
- To operate the machine in reverse, simply pull the Reverse Switch (H) back towards the Handlebar. The reverse speed is set to approximately 50% of the forward speed.
- 6. To stop the machine, let go of the Drive Buttons (G).

VACUUM ONLY:


- 1. Turn on machine Power Switch (A) while making sure the Speed Control Knob (B) is at a lower setting.
- Lower the Squeegee by rotating the Squeegee Lift Lever (C) all the way to the right. Turn on Vacuum Motor with Vacuum Switch on Control Panel (D).

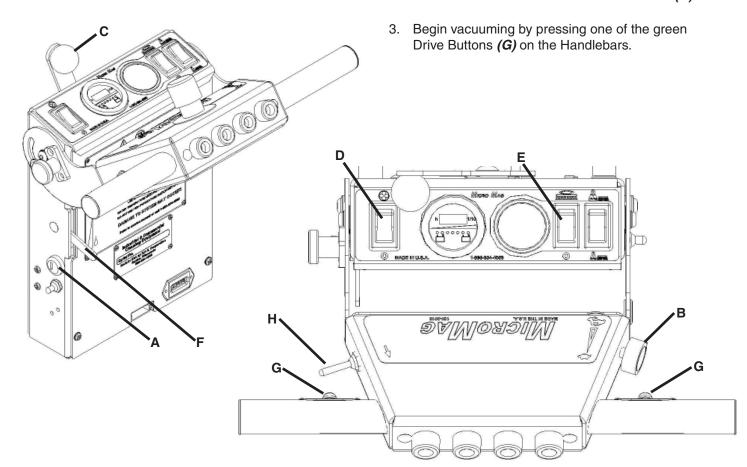

- 14 - MicroMini-OP-EN

ADJUST SOLUTION FLOW:

 Push down on the Solution Flow Lever (A) to decrease the solution flow and push up on the lever to increase solution flow (SEE BELOW).

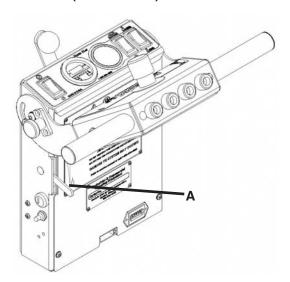

DRAINING SOLUTION TANK:


To drain unwanted cleaning solution from the Solution Tank, perform the following steps: (SEE BELOW)

1. Pull the clear Sight Tube/Drain Hose (B) off barbed fitting.

NOTICE


Get Supervisor APPROVAL first and drain at APPROVED locations only.

Rinse out Tank and solution flow system with clean water.

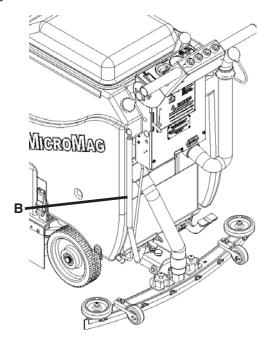

DRAINING RECOVERY TANK:

Always empty Recovery Tank when refilling the Solution Tank. You can refill the Solution Tank while the Recovery Tank is draining. To drain the Recovery Tank remove Drain Hose *(C)* from hook at rear of Tank and pop off cap **(SEE BELOW)**. Rinse with fresh water.

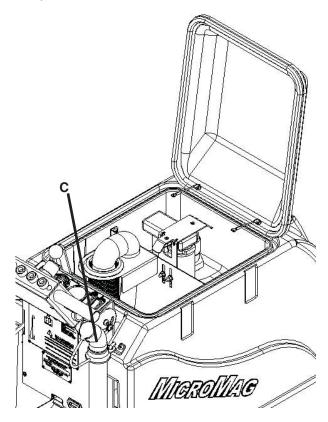

NOTICE

Leave Recovery Lid open while draining Tanks. Rinse thoroughly.

NOTICE

Get Supervisor APPROVAL first and drain at APPROVED locations only.


OPEN RECOVERY LID:

 Rotate Tank Lid (C) forward and full open to rest in a tipped open position (SEE ABOVE).


MicroMini-OP-EN - **15** -

FLUSH RECOVERY TANK:

- Rinse the Recovery Tank after every use (A). This will prevent heavy build-up on the bottom of the Tank, foul odors as well as clogging of the Drain Hose (SEE BELOW).
- Remove Drain Hose (B) and open to allow for drainage of the Recovery Tank (SEE BELOW).

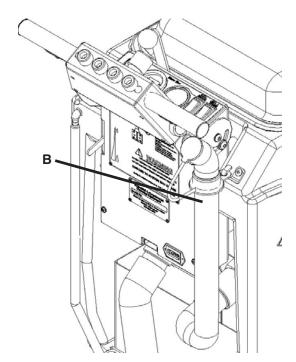

3. Flush Recovery Tank with water hose.

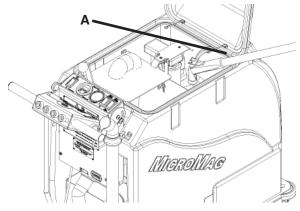

 After rinsing, reattach the Drain Hose (B) on hook (SEE ABOVE).


NOTICE

Keep water off of Control Panel.

CLEAN "DRAIN SAVER":

With Recovery Lid open and Tank fully drained:


- 1. Remove 2" Squeegee Intake Hose (A) from "Drain Saver" strainer (B) (SEE BELOW).
- 2. Remove stainless screen and dispose of debris.
- Rinse screen with fresh water from the outside while holding the screen upside down. This will allow for better cleaning.
- 4. Replace the screen into the bracket.
- 5. Replace 2" Squeegee Intake Hose.

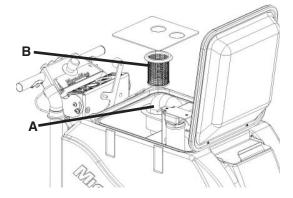

CLEAN VACUUM SCREEN:

With Recovery Lid open and Tank fully drained:


- Remove Vacuum Screen retaining clip (C) (SEE BELOW).
- Pull Vacuum Screen and float ball assembly (D) off of the Vacuum box.
- 3. Rinse with hot water.
- 4. Dry thoroughly.
- 5. Replace the Vacuum Screen onto box.
- 6. Replace and tighten retaining clip.

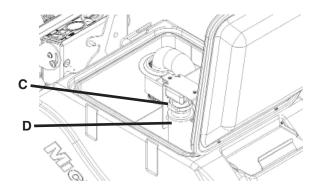


- 16 - MicroMini-OP-EN

TIP TANK:

- 1. Fully drain Solution Tank and the Recovery Tank.
- 2. Remove Squeegee or place in center.
- 3. Unlatch Tank Latch (A) on each side of the machine (SEE BELOW).

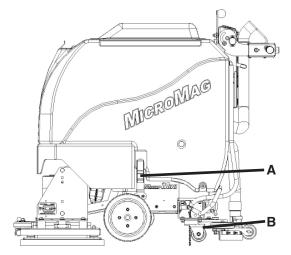

4. Tip Tank Back carefully until supported by strap (SEE BELOW).

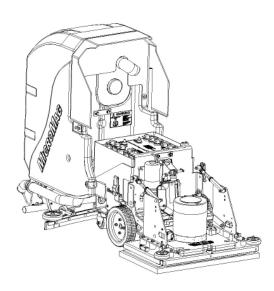


ACAUTION

Casters need to be swiveled back (B) as shown, otherwise machine may tip.


SQUEEGEE UP:

1. To raise the Squeegee off the floor, rotate Squeegee Lift Lever *(A)* counter-clockwise all the way to the left **(SEE BELOW)**.

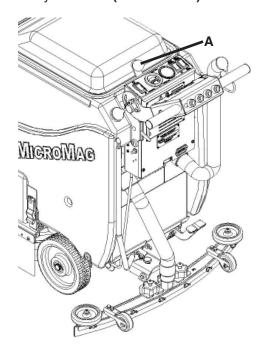

SQUEEGEE DOWN:


 To Lower the Squeegee to the floor, rotate Squeegee Lift Lever (B) clockwise all the way to the right. To turn on Vacuum Motor use the Vacuum Switch (C) on the Control Panel (SEE BELOW).

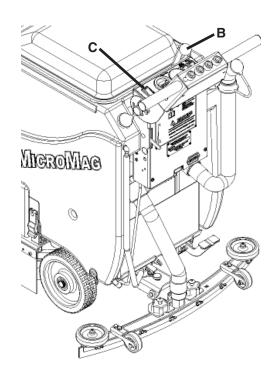


MicroMini-OP-EN - 17 -

VACUUM MOTOR:

- The machine is equipped with a 24 volt, .75HP Vacuum Motor (A) (SEE BELOW).
- If foam or water gets past the Recovery Tank's Vac Screen/Ball system, adjust the bracket (B) in the Tank upwards (SEE BELOW).

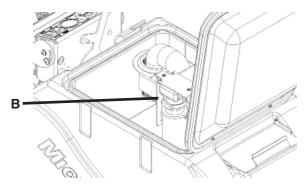

3. The Vacuum Motor has an (standard)
"Foam Muffler" (C), sound reduction walls
(D) and vibration dampeners (E) that are
available to quiet machine operation.

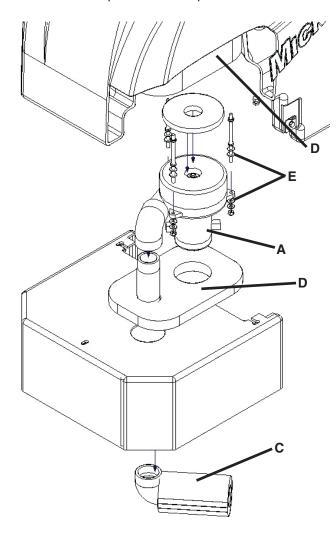


SOLUTION FILTER:

The solution system has an "Inline Filter" (A) to filter out cleaning solution prior to scrubbing (SEE BELOW).

CLEANING SOLUTION FILTER:

- To clean the Solution Filter, first close Solution Flow Valve by moving lever (B) down. Then unscrew the clear cap (C) from house (A) and remove the stainless steel screen (E) (SEE BELOW).
- 2. Rinse any debris from the screen with clean water.
- 3. Reinstall screen and screw cap back on tightly.
- 4. Re-open valve.

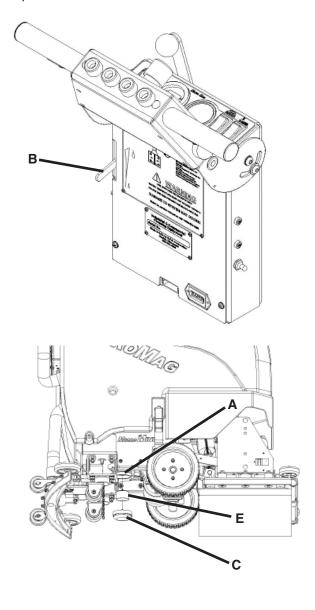

- 18 - MicroMini-OP-EN

BATTERY CHARGING

Charger Specifications

- Output voltage of 24 Volts
- Output current of 12 amps max
- Input voltage of 110 Volts/ 60 Hz (220V/50 Hz available)
- · Automatic shut off circuit
- Made for Deep Cycle Batteries

ADANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

A WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

A WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.


ACAUTION

Always use the automatic battery charger provided by the manufacturer of this machine to charge the batteries of this machine. It is designed to charge the Batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.

EXTERNAL BATTERY CHARGING:

- Transport machine to a well ventilated area for charging.
- 2. Turn the machine off. Tip Tank back.
- Check the water in each battery (1). Do not charge
 the machine unless the water is slightly higher than
 the plates. If needed, add enough distilled water to
 just slightly cover the plates. Be careful not to over fill.
 Batteries can overflow during charging. Replace caps
 before charging.
- 4. First, plug the red 50 Charger plug into the machine's

- Charger Port *(2)*. While the Charger plug is connected, plug the Charger Power Cord into a grounded 110 Volt standard wall outlet *(3)*.
- 5. The Charger will automatically begin charging and automatically shut off when fully charged *(check Battery gauge)*.
- 6. After the Charger has turned off First, unplug the Charger from the wall outlet. Second, unplug the red 50 Charger plug from the machine.
- 7. Recheck the cell level after charging. If needed, add distilled water up to the correct level. Be certain to replace the caps securely and to wipe off the top of the Batteries with a clean cloth.

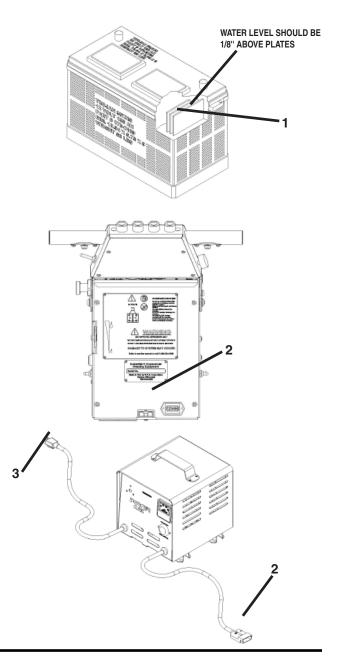

MICROMINI-OP-EN - 19 -

ON-BOARD CHARGER

Charger Specifications

- Output voltage of 24 Volts
- Output current of 12 amps max
- Input voltage of 110 Volts/ 60 Hz (220V/50 Hz available)
- Automatic shut off circuit
- Made for Deep Cycle Batteries

ADANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

▲ WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

A WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

ACAUTION


Always use the automatic battery charger provided by the manufacturer of this machine to charge the Batteries of this machine. It is designed to charge the Batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.


ON-BOARD BATTERY CHARGING (OPTIONAL):

- Transport machine to a well ventilated area for charging.
- 2. Turn the machine off.
- Check the water in each battery. (1). Do not charge
 the machine unless the water is slightly higher than
 the plates. If needed, add enough distilled water to
 just slightly cover the plates. Be careful not to over fill.
 Batteries can overflow during charging. Replace caps
 before charging.
- 4. Plug the Charger Power Cord into a grounded

standard wall outlet (2).

- 5. The green Indicator Light (3) will come on and the Charger will automatically begin charging. When finished, the Charger will automatically shut off as well as the green indicator light (check Battery gauge).
- 6. After the Charger has turned off, unplug the Charger from the wall outlet.
- 7. Recheck the cell level after charging. If needed, add distilled water up to the correct level. Be certain to replace the caps securely and to wipe off the top of the Batteries with a clean cloth.

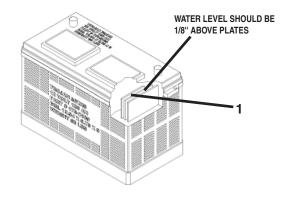

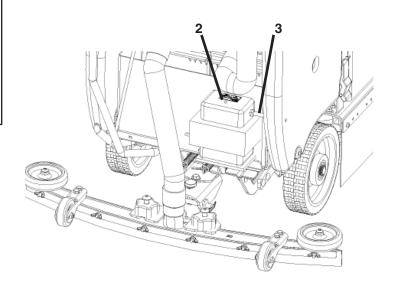

- 20 - MicroMini-OP-EN

BATTERY MAINTENANCE GUIDE

SAFETY:

ADANGER

Explosive hydrogen gas forms when batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

A WARNING

The Batteries in this machine produce hazardous voltage which can cause electrical shock, burns and/ or electrocution. Always disconnect Batteries before servicing this machine.

A WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

A WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

A WARNING

Dress safely. Do not wear rings or metal wrist watches when servicing this machine, as they can cause an electrical short circuit which can cause serious burns.

INSPECTION AND CLEANING:

- Keep Batteries clean and dry from residue
- Check that all vent caps are tight
- Use a solution of baking soda and water to clean if acid residue on Batteries or corrosion on the terminals
- Protective spray of petroleum jelly should be applied to terminals to reduce corrosion


STORAGE:

- Batteries should be fully charged prior to and during storage
- Never store discharged Batteries
- Store batteries in a cool, dry place but never below freezing - Recharge in storage a minimum of every 30 days

Recharge Batteries before putting them back into service

WATERING:

- Add water, NEVER ACID, to cells (distilled water recommended)
- Do not over water
- Before charging the Batteries, only add water if the plates are exposed. Add just enough water to cover the plates, then charge the Batteries. Once fully charged, add water to the proper level as indicated below.
- For full charge plus series Batteries add water to the maximum water level indicator (1)
- Water watering, secure vent caps back on Batteries.

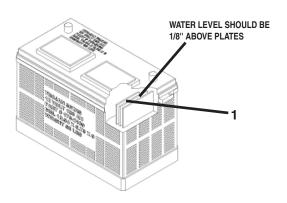

MICROMINI-OP-EN - 21


MAINTENANCE

DAILY MAINTENANCE:

- Remove the clean Pads / Brushes. Never use soiled Pads / Brushes when cleaning. Replace Pads / Brushes when they become packed with residue.
- 2. Remove and clean debris from the float shut-off screen and Drain Saver located inside the Recovery Tank.
- Drain and rinse Tanks thoroughly and flush out solution feed to Scrubdeck.
- Inspect Vacuum Hose for any objects obstructing the air flow.
- Raise Squeegee and wipe Blades with a clean cloth.
 Store Squeegee in the raise position to prevent damage or setting of the Blades.
- 6. Wipe down machine if needed. Use a non-abrasive, non-solvent cleaner or a clean damp cloth.
- 7. Recharge the Batteries if needed.

WEEKLY MAINTENANCE:

 Check Battery water level in each cell of the Batteries and fill as needed. Always use distilled water to refill Batteries. Batteries should be filled approximately 3/4" to 1" above the plates. Overfilling will cause the Batteries to leak during charging. The charging process creates gas bubbles inside the Battery, which effectively increases the volume of the electrolyte.

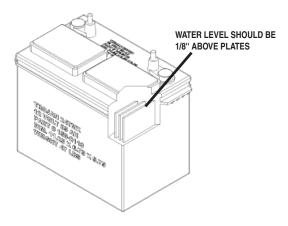

- 2. Clean Battery tops to prevent corrosion.
- 3. Flip EDGE pads.
- Drain and rinse tanks thoroughly. To thoroughly flush out any solution chemicals in solution line valves, refill Solution Tank with a few gallons of warm, clean water and run the machine until Tank is empty.

MONTHLY MAINTENANCE:

- 1. Check Scrubhead and Squeegee lifting cables for wear and spring tension.
- Check machine for water leaks and loose nuts and holts
- 3. Check to see if Battery cables are tightened. Tighten,

if needed, 8-10 ft/lb MAX.

4. Grease caster swivel and Squeegee pivot point.

YEARLY MAINTENANCE:

Call your local dealer for yearly maintenance.

STORING MACHINE:

- Be sure to flush the tanks out completely. To thoroughly flush out any solution chemicals in solution line and valves, refill Solution Tank with a few gallons of warm clean water and run machine until Tank is empty.
- 2. Open the Recovery Tank lid to promote air circulation.
- 3. Raise Scrubdeck and Squeegee.

CHECKING BATTERY SPECIFIC GRAVITY:

Use a hydrometer to check the Battery specific gravity. Checking Gravity:

- Hydrometer
- Battery

NOTICE

Do not take readings immediately after adding distilled water. If water and acid are not thoroughly mixed, the reading may not be accurate.

Check the hydrometer against this chart

SPECIFIC GRAVITY @ 80°F (27°C)	BATTERY CONDITION
1.265	100% Charged
1.225	75% Charged
1.190	50% Charged
1.155	25% Charged
1.120	Discharged

NOTICE

If the readings are taken when the battery electrolyte is any temperature other than $80^{\circ}F(27^{\circ}C)$, the reading must be temperature corrected. To find the corrected specific gravity reading when the temperature of the battery electrolyte is other than $80^{\circ}F(27^{\circ}C)$: add (+) to the specific gravity reading 0.004 (4 points), for each $10^{\circ}F(6^{\circ}C)$ above $80^{\circ}F(27^{\circ}C)$. Subtract (-) from the specific reading 0.004 (4 points), for each $10^{\circ}F(6^{\circ}C)$ below $80^{\circ}F(27^{\circ}C)$.

MICROMINI-OP-EN

- 22 -

MICROMINI PM RECORDS

CUSTOMER INFORMATION								
CUSTOMER			EMAIL					
ADDRESS					PHONE			
CITY	STATE		ZIP		CONTACT			
MACHINE INFORMATION								
MODEL #:			SERIAL #:					
WORK ORDER#:			RE-CHARGE	COUNTE	R:			
CHASSIS HOUR METER:			ISOLATOR H	OUR METI	ER:			
NOTE: Isolators need to be replaced	d on Scrubber Machines	s at 1000 Hours	or Annually					
BATTERY CONDITION		CELL 1	CELL 2	CELL	3 CELL 4		CELL 5	CELL 6
BATTERY 1 HYDROMETER								
BATTERY 1 ELECTROLYTE CLARI	TY							
(Clear, Cloudy, Particulate, Dark)								
BATTERY 1 WATER LEVEL								
(Overfilled, Full, Low, Dry)								
BATTERY 2 HYDROMETER						_		
BATTERY 2 ELECTROLYTE CLARI (Clear, Cloudy, Particulate, Dark)	TY							
BATTERY 2 WATER LEVEL						T		
(Overfilled, Full, Low, Dry)								
CLEAN BATTERY TOPS. CHECK E	BATTERY CABLE AND	TERMINAL CO	NDITION.					
NOTES:								
PAD CONDITION				_				
SCRUB BRUSH FIBER LENGTH		<u> </u>	ROTATED BRUSHES					
DISK PAD DRIVER			GOOD WORN NEEDS REPLACEMEN				PLACEMENT	

PAD CONDITION			
SCRUB BRUSH FIBER LENGTH	ROTATED BRUSHES		
DISK PAD DRIVER	GOOD	WORN	NEEDS REPLACEMENT
EDGE PAD GRIP FACE	GOOD	WORN	NEEDS REPLACEMENT

CHECK OPERATION AND CONDITION OF:	IN SPEC	REPAIR	PROBLEM
KEY SWITCH (OPTIONAL)			
BATTERY GAUGE			
BRUSH SWITCH ON / OFF			
REVERSE SWITCH (DRIVE ONLY)			
SOLUTION LEVER			
SOLUTION SOLENOID			
SCRUBDECK ACTUATOR			
BRUSH MOTOR			
VACUUM SWITCH			
VACUUM MOTOR PREFORMANCE			
SQUEEGEE LIFT SYSTEM			
SQUEEGEE ADJUSTMENT CABLE "HEIGHT"			
SQUEEGEE BLADES			
DRAIN HOSE AND PLUG			
SPRAY JET PUMP, HOSE & NOZZLE (OPTIONAL)			
BATTERY CHARGER CONNECTORS & FUNCTION			
PITCH OF SCRUB DECK (MUST BE LEVEL)			
PITCH OF EDGE DECK (MUST BE LEVEL)			

- 23 -MICROMINI-OP-EN

CLEAN AND / OR LUBRICATE	IN SPEC	REPAIR	PROBLEM
SOLUTION TANK CONDITION			
SQUEEGEE PIVOT POINTS & KNOBS			
SOLUTION FILTER CLEANING			
SCRUB DECK LINKAGE			
VISUALLY INSPECT	IN SPEC	REPAIR	PROBLEM
DRAIN SAVER			
VACUUM FLOATS & SCREENS			
VACUUM HOSES			
SOLUTION HOSES			
BLADE RETAINERS & HARDWARE			
SQUEEGEE WHEELS			
BRUSH SKIRTS			
CASTER CONDITION			
DRIVE WHEELS CONDITION			
COMMENTS			
SERVICING DISTRIBUTOR:			
TECHNICIAN'S NAME:	DATE:		SIGNATURE:
	- -		
		·	
CUSTOMER'S NAME:	DATE		
CUSTOMER'S NAME:	DATE:		SIGNATURE:

- 24 - MicroMini-OP-EN

TROUBLE-SHOOTING

PROBLEM	CAUSE	SOLUTION
NO POWER - NOTHING OPERATES	FAULTY POWER SWITCH BATTERIES NEED CHARGING FAULTY BATTERIES	CONTACT LOCAL SERVICING DEALER SEE CHARGING BATTERIES REPLACE BATTERY
	LOOSE BATTERY CABLE MAIN CIRCUIT BREAKER TRIPPED	TIGHTEN LOOSE CABLE WAIT 5 MINUTES FOR AUTO RESET DETERMINE CAUSE AND CORRECT
SCRUBMOTOR DOES NOT OPERATE	GREEN DRIVE BUTTON IS NOT DEPRESSED	DEPRESS BUTTON ON HANDLE BAR
	CIRCUIT BREAKER TRIPPED	RESET & REDUCE PRESSURE
	FAULTY SCRUBDECK MOTOR OR WIRES	CONTACT LOCAL SERVICING DEALER
VACUUM MOTOR DOES NOT OPERATE	FAULTY VACUUM SWITCH	REPLACE SWITCH
	CIRCUIT BREAKER TRIPPED	RESET & CHECK HOSE DETERMINE CAUSE AND CORRECT
	FAULTY VACUUM MOTOR	CONTACT LOCAL SERVICING DEALER
	CARBON BRUSHES WORN	CONTACT LOCAL SERVICING DEALER
INSUFFICIENT SOLUTION FLOW	SOLUTION TANK LOW	REFILL SOLUTION TANK
	FLOW LEVER TURNED DOWN	TURN LEVER MORE OPEN
	SOLUTION FILTER CLOGGED	REMOVE COVER AND CLEAN
	SOLUTION LINE CLOGGED	REMOVE AND BLOW OUT WITH COM- PRESSED AIR
	SOLUTION VALVE CLOGGED	REMOVE COVER AND CLEAN
NO SOLUTION FLOW	NO SOLUTION IN TANK	FILL SOLUTION TANK
	SOLUTION SWITCH IS OFF	TURN SOLUTION SWITCH ON
	SOLUTION SCREEN CLOGGED	REMOVE AND CLEAN SCREEN
	FAULTY SOLUTION SOLENOID	CONTACT LOCAL SERVICING DEALER
	FAULTY SOLUTION SWITCH	CONTACT LOCAL SERVICING DEALER
POOR WATER RECOVERY	RECOVERY TANK IS FULL	EMPTY RECOVERY TANK
	BALL / SCREEN IS CLOGGED	REMOVE SCREEN AND CLEAN
	VACUUM HOSE IS CLOGGED	REMOVE DEBRIS
	SQUEEGEE IS CLOGGED	REMOVE DEBRIS
	SQUEEGE BLADE IS WORN	ROTATE OR REPLACE BLADES
	FAULTY VACUUM HOSE	CONTACT LOCAL SERVICING DEALER
	VACUUM MOTOR GASKET TORN	CONTACT LOCAL SERVICING DEALER
	TANK GASKET FAULTY	CONTACT LOCAL SERVICING DEALER
	DRAIN PLUG LOOSE	TIGHTEN PLUG
	VACUUM MOTOR FAULTY BATTERY CHARGE LOW	CONTACT LOCAL SERVICING DEALER CHARGE BATTERIES OVERNIGHT

MICROMINI-OP-EN - 25 -

PROBLEM	CAUSE	SOLUTION
POOR WATER RECOVER ON TURNS	WIPERS WORN	REPLACE WIPER MATERIAL
	WIPERS CHATTER	TIGHTEN PIVOT POINTS
	SQUEEGEE SWING IS BINDING	CONTACT LOCAL SERVICING DEALER
	INCORRECT SQUEEGEE SIZE	CONTACT LOCAL SERVICING DEALER
TIRES NOISY	BEARING DRY	GREASE BEARINGS
	FAULTY HUBS	CONTACT LOCAL SERVICING DEALER
POOR TRACTION	EXCESSIVE BRUSH PRESSURE	REDUCE PRESSURE WITH SWITCH
	WORN DRIVE TIRE	REPLACE TIRES
	HEAVY SOAP CONCENTRATION	CONTACT LOCAL SERVICING DEALER
SHORT RUN TIME	BATTERIES RUN DOWN	CHARGE BATTERIES TWICE
	BATTERIES STILL DOWN	CONTACT LOCAL SERVICING DEALER
	BATTERIES LOW ON WATER	FILL WITH DISTILLED WATER TO ¾" ABOVE THE LEAD PLATES
	BATTERIES OVER CYCLED	CONTACT LOCAL SERVICING DEALER

- 26 - MICROMINI-OP-EN

MACHINE SPECS

BODY CONSTRUCTION/DIMENSIONS

 TANK MATERIAL:
 POLY (%6") (.79375 cm)

 CHASSIS CONSTRUCTION:
 3/6" STEEL (.47625 cm)

REAR CASTERS: (2×) 2.5"×1.38" [(2×) 6.35×3.5cm]
FRONT WHEELS: (2×) 8"×2" [(2×) 20.32×5.08cm]
SIZE (L × W × H): 42"×21"×39" (106×53×99 cm)

SQUEEGEE SIZE: 34"
WEIGHT (WITHOUT BATTERIES): 265 LB.
WEIGHT (WITH BATTERIES): 430 LB.

SCRUBDECK SYSTEM

EDGE PAD SIZE: 20-EDGE: (1×) 20"×14" 24-EDGE: (1×) 24"×14"

EDGE SCRUBDECK MOTOR: (1×) 1.0 hp (746 watts) / 2500 RPM OPTIONAL SCRUBDECK MOTOR: (1×) 1.2 hp (895 watts) / 2900 RPM

SCRUBDECK DOWN PRESSURE: 0-125 LB (0-68 kg)

SOLUTION SYSTEM

SOL. TANK CAPACITY: 10 GAL (38 liters)
SOLUTION FLOW RATE: 0 - 0.5 GPM (0 - 2 lpm)

SOLUTION FILTER: STAINLESS / INLINE

RECOVERY SYSTEM

REC. TANK CAPACITY: 10 GAL VACUUM POWER: 0.75 HP

VACUUM POWER: 0.75 HP
DRAIN HOSE: 1.5" DIAMETER (4 cm)

VACUUM SPECS (LIFT / AIRFLOW): 70" / 70 cfm (178 cm / 21cmm)

DEMISTING CHAMBER: 1.25 GAL (5 liters)

DRAIN SAVER: 30 in³ (70 cm³)

BATTERY SYSTEM

SYSTEM VOLTAGE: 24 Volts
STANDARD BATTERY AH RATING: (2x) 130 Ah

OPTIONAL BATTERY AH RATING: (2×) 150 Ah
BATTERY RUN TIME (STANDARD): UP TO 3 HRS.
CHARGER (AUTOMATIC): 12 AMP

CHARGER (AUTOMATIC): 12 AMP
CHARGER (OPTIONAL): 25 AMP

DRIVE SYSTEM

STANDARD DRIVE: 0.4 hp (298 watts), All Gear/ Sealed

FORWARD SPEED: 0-230 ft/min (4 mph) (6 kph)
REVERSE SPEED: 0-130 ft/min (2 mph) (3 kph)

0-130 (711111 (2 11ph)) (3 kph)

PRODUCTIVITY

SCRUBBING WIDTH: 20", 24"

SCRUBBING RATE/HOUR (NORMAL): 18,474 FT/HR

SCRUBBING RATE/HOUR (MAXIMUM): 20,525 FT/HR

MicroMini-OP-EN - 27 -

COMMON WEAR PARTS

EDGE PADS AND SCREENS:

DESCRIPTION	24"×14" SCRUBDECK	20"×14" SCRUBDECK	13"×19"
White Pad	N/A	EDGE-4005	N/A
Red Pad	EDGE-2404	EDGE-4004	N/A
Blue Pad	EDGE-2403	EDGE-4003	N/A
Green Pad	EDGE-2402	EDGE-4002	N/A
Black Pad	EDGE-2401	EDGE-4001	N/A
White Driver Pad	N/A	EDGE-4025	EDGE-4019
60 Grit Sand Screen	N/A	EDGE-4026	EDGE-4020
80 Grit Sand Screen	N/A	EDGE-4027	EDGE-4021
100 Grit Sand Screen	N/A	EDGE-4028	EDGE-4022
120 Grit Sand Screen	N/A	EDGE-4029	EDGE-4023
150 Grit Sand Screen	N/A	EDGE-4030	EDGE-4024
20 Grit Sand Paper	N/A	EDGE-4031	N/A
36 Grit Sand Paper	N/A	EDGE-4032	N/A
60 Grit Sand Paper	N/A	EDGE-4033	N/A
80 Grit Sand Paper	N/A	EDGE-4034	N/A
100 Grit Sand Paper	N/A	EDGE-4035	N/A
100 Grit Diamond Polishing Pad	N/A	EDGE-4012	N/A
400 Grit Diamond Polishing Pad	N/A	EDGE-4013	N/A
800 Grit Diamond Polishing Pad	N/A	EDGE-4014	N/A
1500 Grit Diamond Polishing Pad	N/A	EDGE-4015	N/A
3000 Grit Diamond Polishing Pad	N/A	EDGE-4016	N/A
6000 Grit Diamond Polishing Pad	N/A	EDGE-4070	N/A
Tile/Grout Renovator Pad	N/A	EDGE-4018	N/A
Microfiber Pad	N/A	EDGE-4036	N/A
Abrader Plate	N/A	N/A	EDGE-4011
Dominator HD Strip Pad	N/A	EDGE-4006	N/A
Maroon ECO Prep Pad	EDGE-2407	EDGE-4007	N/A
Remover Burnishing Pad	N/A	EDGE-4008	N/A
Porko Burnishing Pad	N/A	EDGE-4017	N/A
Velcro Pad	N/A	300-4023	N/A

EDGE/ORBITZ GRIP FACE:

DESCRIPTION	PART#
20" Velcro Grip Face	300-1037
24" Velcro Grip Face	300-1038
20" Mighty Lok Grip Face	300-01037Z

- 28 - MICROMINI-OP-EN

SQUEEGEE BLADE KITS & COMPLETE SQUEEGEE ASSEMBLIES:

SQUEEGEE SIZE	MODEL 24" EDGE	GUM RUBBER BLADE KIT	LINATEX BLADE KIT	COMPLETE SQUEEGEE ASSEMBLIES
26" Squeegee	Optional	130-770G	130-770L	130-7180
30" Squeegee	Optional	150-770G	150-770L	150-7180
34" Squeegee	Standard	180-770G	180-770L	180-7180

NOTICE

Squeegee blade kits include (1) Rear Blade, (1) Front Blade, and (2) Backup Wheels with hardware.

NOTICE

Squeegee Assemblies (complete) listed above all come with Linatex blades.

NOTICE

Size is stamped into the top of the painted steel squeegee body on all squeegee's.

NOTICE

The 26" squeegee is designed for narrow aisles and may not have the same water control around tight turns as the large squeegees.

MICROMINI-OP-EN - 29 -

SOAP CHOICES



Industrial • Commercial • Environmentally Safe


TRADITIONAL DRUMS / TOTES



DEMO / RENTAL QUARTS



WALL-MOUNTED SUPERCON

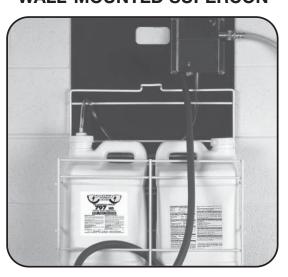

ONBOARD AUTO DISPENSING



- 30 - MICROMINI-OP-EN

Onboard Availability	FORMULAS	
SUDS Approved	707 Citrus Green	An environmentally cleaner that works! It is a solvent free degreaser that works on oil, carbon, even rubber marks. Incorporates the latest technology in "Green Cleaning".
SUDS Approved	733 Low pH	Safe on most surfaces not harmed by water alone. Low scale formula to prevent alkali buildup in cleaning equipment, while offer detergent to emulsify oil.
SUDS Approved	755 High Power	Ideal solvent fortified degreaser. This butyl based detergent is penetrating, fast acting, and deep cleaning with built-in corrosion inhibitors. It is our most effective degreaser.
SUDS Approved	757 Gloss	A high gloss detergent designed to dry to a bright shine. It is ideal for use on finished surfaces, tile, epoxy, or enamel. The special formula removes salt residue, scuff marks and dirt, while leaving no residue behind. The resul is a clean, non-slip surface, ready for immediate use.
SUDS Approved	797 HD	The Heavy Duty concentrate is a Super alkaline detergent, formulated for heavy soil, grease, and thick buildup. Popular in machine shops, auto and truck repair, and other facilities with oil, hydraulic fluids and cutting oils.
**Below Sold in bu	ılk concentrate only. No	nt available as a SuperCon, PowerDose or SUDS product
	727 Pretreat**	Designed to quickly remove tire marks, oil stains and buildup that has accumulated. This pretreat uses the powerful cleaning of natural citrus extract and is intended to be used directly on the floor at 100% concentrate.
	744 Tough Stuff**	Ideal for applications with Hard Water problems. It is safe to use in pressure washers and automatic scrubbers. The formulation enhances soil suspension, digests oil and grease, while supporting extra water conditioner.
		Distributed by:
PowerCat P.O. Box 503 Racine, WI 53 Phone: 414-7	3404-0503	

MICROMINI-OP-EN - 31 -

STANDARD WARRANTY POLICY

RPS Corporation warrants its Machines and Original Equipment Accessories to be free of manufacturer's defects in materials or workmanship for the periods specified below. Warranty will be granted at the sole discretion of RPS Corporation and is subject to final claim and parts review by RPS Corporation and its vendors. This policy is effective January 1, 2014 and is subject to change on production units at a future date.

COVERAGE, EXCLUSIONS AND LIMITATIONS:

BATTERY POWERED MACHINES:

PARTS: 36 months or 1,500 hours (Power On meter)

LABOR: 12 months

TRAVEL: 3 months (150 mile maximum)

POLY TANKS: 7 Years or 3,000 hours (Water must not exceed 135°F/57°C)

Freight coverage for 3 Years under the parts section of warranty.

AC POWERED MACHINES:

FLOOR MACHINES: All EDGE and ORBITZ Models

PARTS: 1 Year LABOR: 90 Days

MOTOR: 2 Years(1,500 hour)

ZERO3 WALL MOUNT/PORTABLE UNITS:

PARTS: 6 Month

BACKPACK VACUUMS: Unit Must be Shipped back to Factory (Pre-Paid Freight)

PARTS: 3 Years / Lifetime Housing Warranty / 7 Year Motor Warranty

LABOR: 3 Years

CARPET SPOTTER/EXTRACTOR: Unit Must be Shipped back to Factory (Pre-Paid Freight)

PARTS: 3 Years / Lifetime Housing Warranty / 7 Year Motor Warranty

LABOR: 3 Years

NEW PARTS: 90 day warranty on OEM replacement parts (when installed by an authorized dealer)

VALIDITY: Machine is serviced by Factory Authorized Personnel and a fully completed Machine Delivery Form (online or fax) is

on record at RPS Corporation.

LIMITATION: Warranty will begin on date of machine installation to end-user or 6 months after shipment from RPS Corporation to

the distributor if unsold at that time.

This warranty includes all parts and original equipment accessories on the machine except **normal wear items**. Some examples of these wear item exclusions are:

- EDGE/ORBITZ isolators (1,000 hours on average)
- EDGE/ORBITZ Grip Face
- Squeegee Blades, Wiper Blades, Skirts and Curtains.
- Caster Wheels, Squeegee Wheels and Bumpers.
- · Lights (Strobe, Headlights, or Bulbs).
- Chains and Belts.
- Filters, Screens, and Vacuum Bags.
- Motor Brushes and/or commutator wear.
- Brooms, Brushes, Pads and Pad Retainers.
- Hoses and Tubing.
- Drive Tires, Foam Filled/Pneumatic Wheels, Tubes or Valve Stems.
- Rubber Floor Seals or Gaskets.
- Vacuum motors with evidence of moisture or debris intrusion or > 400 hours.
- Batteries (see below)

NOT COVERED: Routine maintenance, adjustments or parts damaged from abuse, neglect, improper use of the machine, or lack of scheduled "daily, weekly, monthly" maintenance in accordance with our published PM Sheets.

BATTERIES: Warranted through the battery manufacturer for One Year (pro-rated) from the date of delivery. The battery manufacturer approves or denies the warranty coverage after their analysis. Labor and Travel credit through RPS is applicable once a warranty defect has been confirmed.

NOT COVERED: Damage from lack of maintenance/lack of water, use of a non-OEM charger, or use of non-distilled water.

BATTERY TERMINALS: Battery terminals and cable connections are covered for 30 days from the shipment of the machine. (Battery terminals and cables should be inspected, cleaned and secured upon installation of the machine and then every 30 days thereafter.)

V14.0807

MACHINE INSTALL / WARRANTY REGISTRATION							
Installing Dealer:		Installed By: Install Date: End-User Contact:					
Location: (City, State):							
End-User Company Name:							
Address:	City/Sta	City/State:		Zip:			
Phone:	Fax:		_Email:				
Model:	Serial #:		Hour Meter:				
BUYER'S REPRESENTATIVE HAS RECEI' SCRUBBERS: - Filling solution tank, Solution tan - Adjusting controls & operation, D vacuum timer - Recovery tank draining & cleanir cleaning, drain saver basket empti - Shroud and pad/brush removal a - Side Wiper and Curtain adjustme - Solution valve and filter operation - LCD display operation, 4 hour m - Tank tilt back feature, only when - Squeegee hose removal and che BURNISHERS - Train and have customer demon	k sight tube, Solution drain hose or voluble scrubbing, Squeegee lift delaying in APPROVED locations only, Comied and installation ent and maintenance for water controln (removal and cleaning) eters (key switch, brush, traction drive both tanks are fully drained	alve for flushing ar High Recovery R nmon Squeegee h I e, vacuum)	nd freezing condition IED Light, vacuum s ose clog points, vac	ns witch (horn honking) and			
- Method for cleaning the dust filte- Correct operation of the main br	d replacement of main broom and sicer, emptying out the debris hopper an oom and side broom levers, and undeass door and not to operate through	de brooms nd correct installati erstands to park w		osition			
EDGE / ORBITZ MACHINES - EDGE / ORBITZ scrubbers mus - Customer understands the Grip				with the floor			
ALL MACHINES - Checking for proper battery elections of the control of the contr	Brake Override functions if installed / A er understands batteries have limited ment ands the list of WARNINGS/CAUTION ICLE Guide posters hung up and review d source of information (Videos, PM S ere delivered, reviewed, understood,	Always park on a s "cycles" and rechange of the control of the co	solid and level surface arging = 1 cycle r manual up for quarterly news	ce, NEVER on a movable or			
Installed By (print)		Signat	ture				
Buyers Representative (print)		Signat	ture				
Buyer agrees to pay for any repairs	s, adjustments, or secondary tra warranty.		ufacturer determ	ines is excluded from the			

Complete Online at www.rpscorporation.com

MICROMINI-OP-EN - 33 -







1711 South Street
Racine, WI 53404
www.rpscorporation.com
www.factorycat.com
www.tomcatequip.com
Tel. US: 800-634-4060
Tel. Int: (001) 262-681-3583